

CW64LB ALL PURPOSE SOAP DISPENSER

INSTALLATION INSTRUCTIONS

INSTALLING DISPENSER:

- 1) INSERT THREADED SHANK INTO HOLE SO THAT RUBBER WASHER(18) IS BETWEEN BASIN AND SHOULDER OF SHANK.
- 2) PLACE WASHER(19) ON SHANK AND SCREW NUT(16) ON TO SHANK. TIGHTEN NUT SO THAT SHANK IS HELD SECURELY TO BASIN. DO NOT OVER TIGHTEN NUT.
- 3) REMOVE PISTON ASSEMBLY BY UNSCREWING COLLAR(3) AND LIFTING ASSEMBLY UPWARD. USE SERVICE WRENCH PROVIDED.
- 4) INSERT SUPPLY TUBE(13) OVER END OF CYLINDER(9).
- 5) REPLACE PISTON ASSEMBLY INTO SHANK HOUSING AND TIGHTEN COLLAR HAND TIGHT.
- 6) INSTALL GLOBE SO THAT SUPPLY TUBE IS APPROXIMATELY 1/4" AWAY FROM BOTTOM OF GLOBE. TIGHTEN HEX NUT TO GLOBE ADAPTER AND GLOBE(15,17,&12). THIS WILL PREVENT SEDIMENT FROM BEING DRAWN UP INTO THE DISPENSING MECHANISM.

FILLING DISPENSER:

- 1) UNSCREW COLLAR(3) WITH SERVICE WRENCH. COLLAR UNSCREWS IN A COUNTER-CLOCKWISE DIRECTION WHEN LOOKING DOWN ON DISPENSER.
- 2) LIFT OUT ENTIRE VALVE ASSEMBLY FROM SHANK HOUSING
- 3) POUR LIQUID SOAP INTO OPEN TOP OF SHANK UNTIL CONTAINER BELOW BASIN IS FILLED.
- 4) REPLACE VALVE ASSEMBLY AND TIGHTEN COLLAR WITH WRENCH. NOTE:IT IS NOT NECESSARY TO REMOVE THE SOAP CONTAINER WHEN FILLING THIS DISPENSER, BUT THIS CAN BE DONE IF DESIRED.

OPERATION:

- TO PRIME DISPENSER WHEN USING FOR THE FIRST TIME, COVER SPOUT OPENING WITH FINGER ON THE UP-STROKE OF PLUNGER UNTIL SOAP STARTS TO FLOW. (REMOVE FINGER ON DOWN-STROKE.)
- ABOUT TWO DAYS ARE REQUIRED BEFORE SEAL IS SOAKED AND EXPANDED TO ITS NORMAL OPERATING CONDITION.

MAINTENANCE:

- A LITTLE LIQUID SOAP ON A WET CLOTH IS YOUR BEST POLISHING AGENT. AVOID THE USE OF ABRASIVE CLEANERS. CLEAN THE SPOUT NOZZEL AND ALL SURFACES DAILY.

CW64LB PARTS

DRAWING NO.	PART NUMBER	DESCRIPTION
1&2	CW64-174M1	PISTON AND 2 1/2" SPOUT
1&2	CW64-174	PISTON AND 4" SPOUT
1&2	CW64-174LM6	PISTON AND 6" SPOUT
3	CW64-4	COLLAR
4	CW64-62	SHANK
5	CW64-5	SILICON "O" RING
6	CW64-69	SPACER
7	CW64-8	S.S. SPRING
8	CW64-88	DUCK BILL
9	CW64-75	CYLINDER
10	CW64-71	S.S. RING
11	CW64-72	SET SCREW
12	CW64-30	GLOBE
13	CW64-28	SUPPLY TUBE
14	CW64-26	KEY
15	CW64-22	HEX NUT
16	CW64-22A	MOUNTING NUT
17	CW64-42	GLOBE ADAPTER
18	CW64-25	RUBBER WASHER
19	CW64-21	S.S. WASHER
20	CW64-19	"O" RING

